



Installing & Removing Doors

INSTALLING DOORS INTO FRAME(S)

1. Partially loosen the upper jam nut on all top hinge pins on the frame with the 11/16" wrench supplied (Figure 1) so that hinge pin will spin.
2. Remove the O-ring from each hinge pin (may not be present).
3. Make sure the black nylon washer is on the bottom frame hinge pin (Figure 2).
4. Hold the door up to the frame opening as if it were partially open.
5. Lift the door up onto the top hinge pin (Figure 3). DO NOT FORCE.
6. Set bottom of the door down to engage the hinge assembly onto the bottom hinge pin (Figure 4).
7. Open the door 90 degrees and drop the hold open cam onto the slide pin (Figure 5).
8. Repeat steps 2 thru 7 to set all the doors into the frame.
9. Connect the power cord (Figure 6).

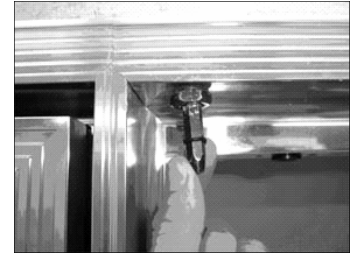


Figure 1.



Figure 2.

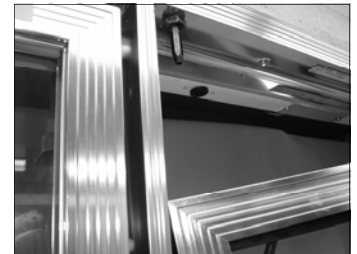


Figure 3.



Figure 5.



Figure 4.



Figure 6.

REMOVING DOORS FROM FRAME(S)

1. Using the 5/16" wrench (supplied with each door frame), partially loosen the upper jam nut on the Top Hinge Pin.
2. Disconnect any power cord attached between door and frame (Figure 6).
3. Open the door 90 degrees and lift the hold open cam off the slide pin (Figure 5).
4. Carefully lift the door up and off bottom hinge assembly (Figure 3).
5. Pull the bottom of the door out to clear the frame (Figure 7).

CAUTION: Do not extend the bottom of the door as damage can occur to the top hinge pin and/or the nylon bushing located in the door.

6. Slide the door down off the top hinge pin (Figure 3).



Figure 7.

