

- 1- Remove the cardboard from both sides of the frame package. Frames are shipped as "single wide" crates (**Figure 1**).
- 2- Each line-up includes a set of tools listed on page 1, and an Installation Manual. Remove, and save for later use.
- 3- Remove the screws holding the frame(s) into the crate(s).
- 4- Remove the frame(s) from the crate(s). The frames should be removed from the side of the crate without corner braces. Safely set aside in the upright position.
- 5- Remove the stretch wrap holding the LED lights to the mullion (**Figure 2**).



Figure 1



**CAUTION:**  
Risk of product damage. Be careful not to damage LED lights.



Figure 2

### Unpack the Doors:

- 1- Remove the plastic stretch wrap from the door packs (**Figure 3**).
- 2- Remove the two wood boards at the top.
- 3- Cut the steel band on ONE END ONLY and remove the end of the crate.
- 4- Cut the center band and remove the wood board from the top.



**CAUTION:**  
Risk of product damage. Do NOT remove the remaining end band; all the doors will fall if the remaining band is cut.



Figure 3

- 5- Fold the cardboard back over the remaining band.
- 6- Remove one door at a time from the package.
- 7- Remove any protective plastic wrap from the door(s) and set them aside for later installation.