



W
Z
E
Y
S

Installation Instructions for Retro-Fit Lock (Part # 2906)

Tools Required:

- Phillips Screw Driver
- Hammer
- Center Punch
- 9/64" Drill Bit
- Electric Drill

1. Position Lock as shown (Figure 1) and mark location on the frame.
2. Remove Lock, open door fully, hold lock firmly in position at the mark on the frame (Figure 2) and center punch frame using lock as a template.
3. Remove Lock, drill a 9/64" hole.
4. Position Lock and attach with the thread cutting screw provided (Figure 2).

Figure 1

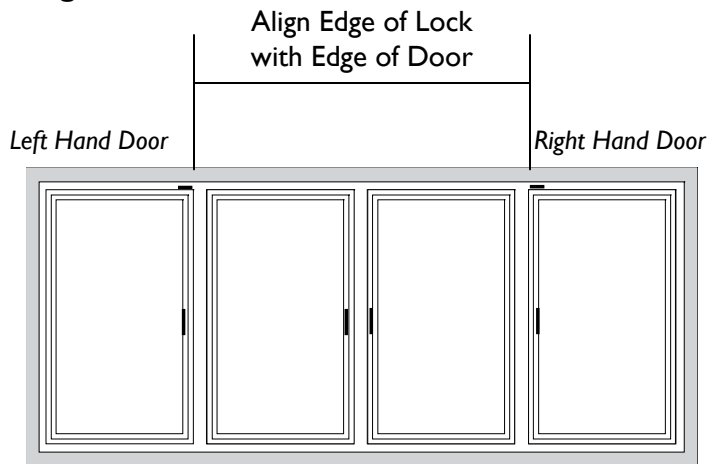


Figure 2

